

Quick Start Guide for Classroom Equipment


Classroom Equipment

1. Touch Screen TV
2. TV Power Button
3. Audio Mixer (may have different model depends on which classroom)
4. Source Switch (HDMI, DP, DVD, etc.)
5. Media Hub
6. Wall HDMI Socket
7. Built-in Computer (PC/Mac, depends on which classroom, with wired keyboard and mouse)



Before Using

1. Open the sliding whiteboard.

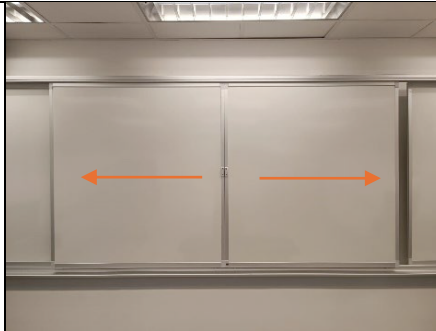

2. Check if the touch screen TV is turned on by touching the TV screen. If it is off, turn it on by pressing the power button on the right-hand side of TV.



Using the Computer

1. Use built-in computer - Choose "PC" or "Mac" in the Source Switch.
2. Reboot After Using
 - No need to switch off the TV or built-in computer.
 - Data in the TV or built-in computer will be cleared after restarted, please save your data before leave.
3. Connect your own computer in 2 ways (Bring your own HDMI cable and adaptor)

Way 1.



Way 1. Connect your own computer to HDMI slot of Media Hub → Choose “HDMI” in Source Switch. Way 2. Connect your own computer to HDMI slot of Wall Socket → Choose “Wall HDMI” in Source Switch.	Way 2. 
--	---

Troubleshooting

No signal on TV?

1. Check the **Source Switch**, see whether a correct **source** is selected.
 - “PC” or “Mac” for built-in computer
 - “Wall HDMI” for connecting your computer with Wall Socket
 - “HDMI” for connecting your computer with Media Hub
2. **Check the setting in TV** by pressing the “**Source**” icon; make sure “**HDMI1**” is selected.

Source Switch:




TV Source:




Identification of Cables and Slots by Color Label

To prevent incorrect source-switching connections, please do not tamper with or reposition any cables, connectors, or related equipment.

Matching of Source Switch and Video Cables:

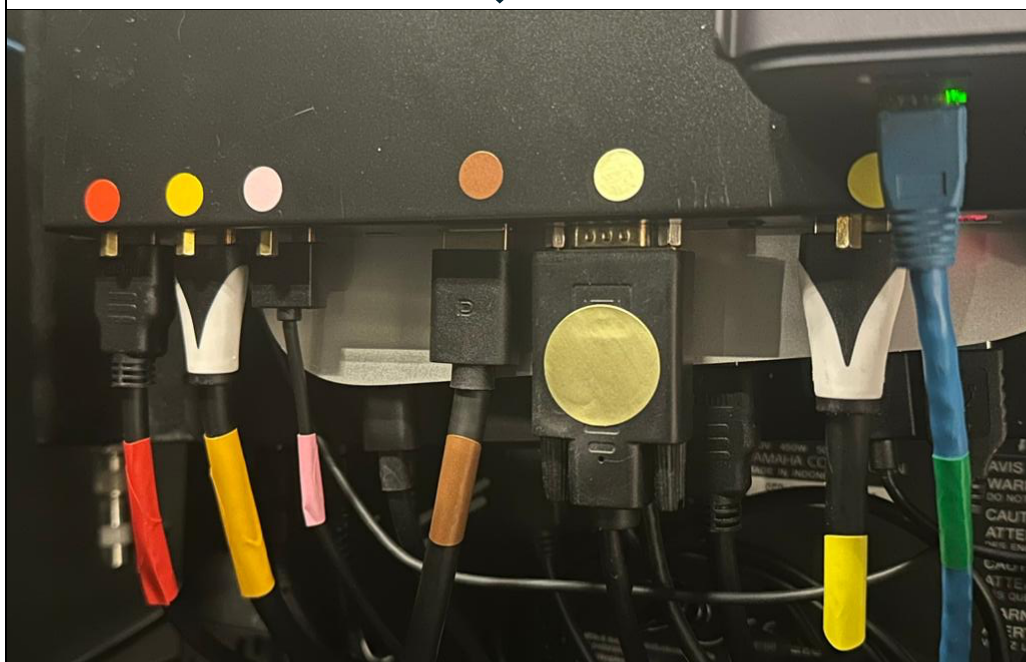

Matching of Network Cables for Wi-Fi and PC internet connection.

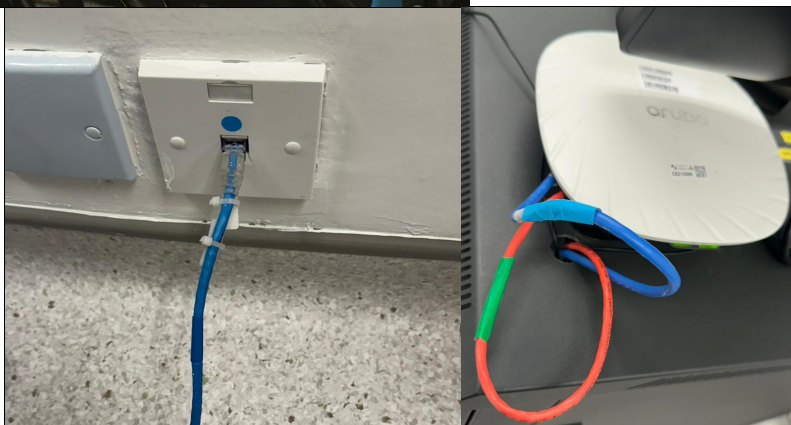

For IT technical issues, please contact IT Helpdesk at Ext. 8737 or itsupport@hkapa.edu during office hours.